



ICE CREAM MAKER

Model: PD-BLICM-WH

Please read the instruction manual carefully and follow the instructions for operation and use before using this product. Pls keep the manual for future reference. This product is for home and similar use only

Precautions (Juicer)

1. This product with lithium batteries to drive DC motor work, chargers using 5V/1A adapter, please use the provided USB power cord to fully charge the product before use, charging time should be 3 hours or above. Also, clean all parts that contact with the food and dry it before use.
2. Remove the main body or cup only after the product has been switched off and the knife has stopped working completely.
3. When cleaning the product, make sure that the switching power is off and the charging port silicone is plugged in before cleaning the main body and cups. Do not immerse the main body into water or other liquids, nor flush the main body under water or other liquids.
4. Do not use the product to make juice more than 5 times one time continuously to avoid overheating caused by heavy electronic component loads.
5. This product has overload protection function, if size of the ingredients too big and block the knife, the product will stop working, accompanied by "beep" sounds for three times, after removing the overload ingredients it can be restarted again.
6. Each accessory of this product cannot be disinfected by hot water or microwave ovens exceeding 60 degree Celsius to protect it against thermal deformation.
7. Do not put the main parts of the appliance into the dishwasher or cleaning equipment, and do not use steel velvet, abrasive cleaners or corrosive liquids to clean the product.
8. This product is for special fresh juicer, it is not suggest to winch meat, ground nuts or soy products.
9. Permanently disconnect the blender before assembling, disassembling or

cleaning:

10. Turn off the power switch and disconnect the power supply before replacing the accessories or touching moving parts.

11. The product has a built-in lithium battery and the following things to be noted:

A. Do not use this product for a long time, please charge every three months to prevent battery damage; B. Charge when the battery electricity is low.

12. This product is for domestic use only. Please follow the instruction manual to avoid any unnecessary damage.

* Fully charge the product before first using it and thoroughly clean the parts that contact with the food, this product have dual safety measures, only the cup body rotated to a fixed corresponding body position is in standby status (after rotating in place, the product "beep" sounds shows a prompt installed in place)

Instruction of use (Juicer)

1. Reread the previous notes. 2. Wash the fruit and cut it into small pieces of about 1.5 x 1.5cm (Note: fruit with core, hard material, thick skin or hard shell, remove it first);

3. the fruit fill into %60 of the maximum scale of the cup body is the best, and then add drinking water or

milk and other liquid to the maximum scale of the cup body, and then turn the main body to the cup, the buzzer "beep" a sound, to prove that the main body has been installed in place; Note:

The fruit and water inside the cup cannot exceed the maximum scale of the cup body to prevent water or juice from overflowing.


4. Double-click to start the product, the product reverse (Picture 04), the default working time of the product is 40 seconds, gently shake the product when working, stirring effect is better;

5. After the juice is finished, wait for the blade stop working, and then reverse-clockwise rotation to remove the body, you can drink.

6. Plug the USB cable into the charging port (compatible a variety of 5V power


- supplies) when the appliance fails to start and the power LED flashes in red color; This product can be connected to a variety of smartphone chargers with their own USB charging cable charging, but also can use charging treasure to charge the product, around 3 hours it will be full of electricity, fully electricity can make juicer around 11 cups.
7. Do not put the main parts of the appliance into the dishwasher or cleaning equipment, and do not use steel velvet, abrasive cleaners or corrosive liquids to clean the product.
 8. This product is for special fresh juicer, it is not suggest to winch meat, ground nuts or soy products.
 9. Permanently disconnect the blender before assembling, disassembling or cleaning:
 10. Turn off the power switch and disconnect the power supply before replacing

Structure diagram

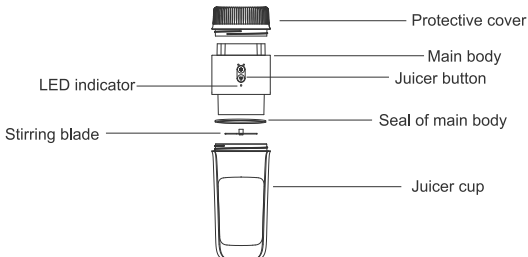


Technical parameters:


Product model	J1-01	Battery voltage	7.4V===	Charging voltage	5V === 1A
Speed	18000rpm	Battery capacity	2*1500mAh	Rated power	55W
Stir capacity	340mL	Size	86*86*249(mm)		
Net weight	570g				

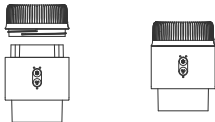

01 Place the protective cover on a slow-stirring side

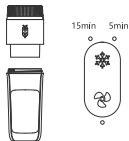



02 (Install the body) rotates the body clockwise and tightens it on the juicing cup ("Beep" sounds),t

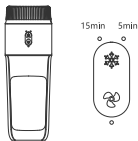

03 (Start making juicer) Double-click the juicer button to start the product (the working time is fixed at 40seconds, re-click the juicer button to stop the product from working).



04 (inverted product).

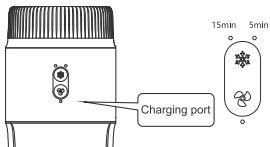

05 After the ingredients processing is completed, wait for the blade to stop working, and then reverse-clockwise rotation to remove the main body, you can drink.

06 The LED indicator is always on when working. A sufficient amount of electricity shows white light, and when there is insufficient power, shows red light, please charge it on time. When the product blade sticks, the product will stop working, accompanied by "Beep" sounds for three sounds, remove the ingredients of the blade restart it.



07 (charging) When charging, the LED indicator lights up at a constant red light After fully charged, the LED indicator will always be white (The product cannot start working when charging)

Fault	Cause analysis	Troubleshooting
Cannot be powered on or shut down in using and has a red light flashing	There is not enough electricity	Please charge it in time
Stop working when using with three "Beep" sounds	product overload	Remove overload ingredients or cut into small pieces and reuse
Leaking	The main body and the juicer cup are not tightened	Tighten the main body with the juicer cup


Precautions (slow stirring)

1. Ice buckets are avoided under direct sunlight and put it away from heat sources such as heaters, stoves, etc. Do not use the product in uneven places.
2. Do not let children touch the frozen ice buckets to avoid frostbite.
3. Do not touch the frozen ice buckets with empty or wet hands, use gloves or cloth to touch it and avoid frostbite.
4. If coolant spills from an ice bucket, do not touch it with your hands or other parts of your body to avoid frostbite.
5. The console can only be used with the supplied product accessories, do not use other unofficial accessories to avoid malfunctions.
6. Do not take off the main unit while running, the mixing rod must not be exposed
7. The machine must not be used continuously more than 20 minutes, and if the using time exceeds 20 minutes, be sure to stop using it at least half an hour before using again.
8. This product is mainly for home use, it is not suggested for commercial use. Please follow the instruction manual to avoid any unnecessary damage.

How ice buckets are used

1. When freezing ice buckets, be sure to remove the host and freeze the ice buckets separately
2. When freezing ice buckets, be sure to keep the ice bucket openings facing up and vertically in the refrigerator freezer, and do not tilt and freeze the ice buckets upside down.
3. When freezing the ice bucket, be sure to wipe the water clean so that the blender bar does not rotate due to ice.
4. After use in a special ice bucket, be sure to liquefy the coolant in the ice bucket completely before placing it in the freezer to prevent uneven distribution of coolant. (Shake the ice bucket, if the liquid flows smoothly, you can freeze it again)
5. Do not break or fall on the ice bucket to avoid coolant spillage.
6. Use a plastic or wooden spoon to remove the finished ice cream from the ice bucket, do not use sharp cutlery and metal spoons to avoid injuring the surface of the ice bucket.
7. Do not place ice buckets in microwave ovens, ovens and other heat sources.

How ice buckets are used

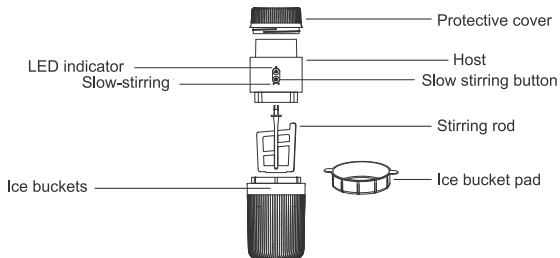

Product model	J1-01	Battery voltage	7.4V \equiv	Charging voltage	5V \equiv 1A
Slowly stir the speed	30-45rpm	Battery capacity	2*1500mAh	Rated power	55W
Slow-stir capacity	200mL	Size	96*96*216 (mm)		
Net weight	860g				




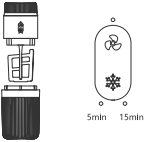
How to use

Ice buckets should be frozen around 10 to 12 hours below -20 degrees Celsius.
(Mechanical refrigerator please adjust the gear to be 5 gears or more to ensure the freezing effect)

For detailed instructions on ingredients, please refer to the accompanying recipe
Refrigerate the ice cream ingredients you want to make for 2-1 hours and make them more quickly (alcohol in the ingredients can affect the effect)

Do not stir until water is added, otherwise the mixing rod will not work

First put the ingredients in the juice cup and stir them well in a "juicer" operation

	
<p>01 Place the protective cover on the juicing side (screw in clockwise and hear a "sound")</p>	<p>02 Load the blender bar into the main unit</p>
	
<p>03 Pour the stirred ingredients into an ice bucket, and the ingredients must not exceed the MAX line(200ml) (once the ingredients are placed in the ice bucket, immediately load the host into the ice bucket and start stirring to avoid freezing the ingredients and affect the stirring).</p>	<p>04 Place the host from top to bottom in an ice bucket</p>



Complete ice cream, please eat as soon as possible.
If you want to save or store it, place it in the appropriate container and keep it in the refrigerator.

05 Double-click the slow-stir button, the machine starts working, at the same time, the 5min light flashes, you can click the slow-stir button to switch the stirring time (when the light flashes), flashing after the buzzer long drop, slow stirring timing officially began

06 When the operation is finished, the buzzer is long "Beep" sound for three times. Remove the console and remove the finished ice cream from the ice bucket.

During slow-cooking, such as the host followed up and down movement or left and right rotation, please turn off the power supply, the main body and the mixing rod out, using the included spoon, the ice bucket structure of the ingredients broken mix, again loaded back into the host and the mixing rod to continue operation.

The ice cream is softer, and if you want a harder taste, put the stirred ingredients in the freezer with the ice bucket and freeze for another 25-15 minutes.

Do not freeze ice buckets with ingredients for long periods of time to avoid damaging them.

FAQ Analysis

Fault	Cause analysis	Troubleshooting
Cannot be powered on or shut down in using and has a red light flashing	There is not enough electricity	Please charge it in time
The blender does not work	Whether the host and the blender bar are in place Whether the material in the ice bucket is frozen	Refit the main unit and the blender bar Check the material in the ice bucket
Ice cream is not made or works poorly	Whether the freezer bucket is frozen not Whether the ingredients are placed in the refrigerator to cool	Set the refrigerator to maximum gear and place the ice bucket in the freezer for more than 16 hours Leave the ingredients in the fridge for 1-2 hours before making

	<p>الآيس كريم جاهز، يرجى تناوله في أقرب وقت ممكن. إذا كنت ترغب في الاحتفاظ به أو تخزينه، ضعه في حاوية مناسبة واحفظه في الثلاجة.</p>
<p>٥- اضغط مرتين على زر الخلط البطيء، ويبدأ الجهاز في العمل في نفس الوقت، يومض ضوء لمدة ٥ دقائق. يمكنك النقر على زر الخلط البطيء لتبديل وقت الخلط (عندما يومض الضوء)، بعد الوميض الطويل للضفارة، يبدأ التوقيت للخلط البطيء بشكل رسمي.</p>	<p>٦- عند الانتهاء من العملية، يصدر الجهاز صوت "بيب" طويل لثلاث مرات، قم بإزالة القاعدة واستخراج الآيس كريم المكتمل من دلاء الثلج.</p>





أثناء عملية الخلط البطيء، مثل حركة القاعدة للأعلى وللأسفل أو الدوران يميناً ويساراً، يُرجى إيقاف تشغيل مصدر الطاقة وإخراج الجهاز الرئيسي وقضيب الخلط. باستخدام الملاعقة المرفقة، قم بكسر هيكل دلاء الثلج لمزج المكونات، ثم قم بإعادة تحميلها في القاعدة وقضيب الخلط للاستمرار في التشغيل.
الآيس كريم سيكون أكثر نعومة، وإذا كنت ترغب في طعام أكثر صلابة، ضع المكونات المخفوقة في الفريزر مع دلاء الثلج واتركها لتجمد لمدة ٢٥-١٥ دقيقة إضافية.
لا تقم بتجميد دلاء الثلج مع المكونات لفترات طويلة لتجنب التلف.

تحليل أسئلة الأسئلة الشائعة


خطأ	مستخدم تحليل السبب	استكشاف الأخطاء وإصلاحها
لا يمكن تشغيله أو إيقاف تشغيله أثناء الاستخدام، ويظهر إشارة حمراء وامضة.	لا يوجد كهرباء كافية	يرجى شحنها في الوقت المناسب
الخلط لا يعمل.	ما إذا كان المضيق وشريط الخلط في مكانها سواء تم تجميد المواد الموجودة في دلو الثلج	أعد تركيب الوحدة الرئيسية وشريط الخلط تحقق من المواد الموجودة في دلو الثلج
لم يتم إعداد الآيس كريم أو يعمل بشكل غير مرضٍ.	ما إذا كان دلو المجمد مجمداً أم لا ما إذا كانت المكونات موضوعة في الثلاجة لتبريد	اضبط الثلجة على السرعة القصوى وضع دلو الثلج في الفريزر لأكثر من ٦ ساعة اترك المكونات في الثلاجة لمدة ٢-٣ ساعة قبل التحضير

كيفية الاستخدام

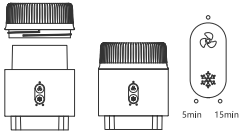يجب تجميد دلاء الثلج لمدة تتراوح بين ١٠ إلى ١٢ ساعة عند درجة حرارة تحت -٢ درجة مئوية.
(يرجى ضبط تروس الثلجة الميكانيكية على ه تروس أو أكثر لضمان تأثير التجميد)
بالنسبة للتعليمات التفصيلية حول المكونات، يرجى الاطلاع على وصفة الرافقة.
قم بتبريد مكونات الأيس كريم التي ترغب في إعدادها لمدة ٢-١ ساعة للحصول على تحضير أسرع (قد يؤثر الكحول الموجود في المكونات على التأثير).
لا تقم بالتحريك حتى يتم إضافة الماء، وإلا فإن شفرة الخلط لن تعمل.
أولاً، ضع المكونات في كأس العصير واخلطها جيداً في عملية "العصارة".

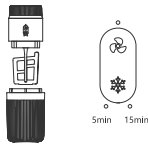	
<p>ضع الغطاء الوافي على جانب العصر (أدره باتجاه عقارب الساعة واستمع إلى الصوت).</p>	<p>أدخل قطعة الخلاط في الوحدة الرئيسية.</p>
	
<p>اسكب المكونات المخفوقة في دلاء الثلج. ويجب ألا تتجاوز المكونات خط الحد الأقصى (٢٠٠ مل) (بمجرد وضع المكونات في دلاء الثلج، قم بتحميل القاعدة على الفور في دلاء الثلج وابدأ الخلط لتجنب تجمد المكونات وتأثير عملية الخلط).</p>	<p>ضع القاعدة من الأعلى إلى الأسفل في دلاء الثلج.</p>

كيفية استخدام دلاء الثلج:

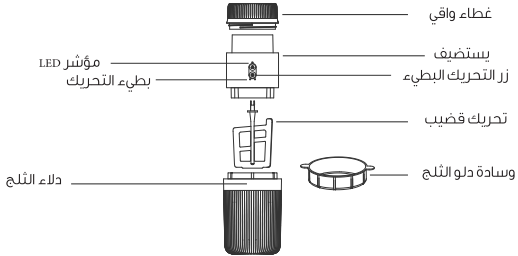

موديل المنتج	JI-01	قوة البطارية	7.4V==	جهد الشحن	5V == 1A
حرك السرعة بطء	30-45rpm	قدرة البطارية	2*1500mAh	القوة المصنفة	55W
قدرة التحريك البطيء	200mL	مقاس	96*96*216 (mm)		
الوزن الصافي	860g				

الاحتياطات (التحريك البطيء)

١. يتجنب وضع الدلو الجليدي تحت أشعة الشمس المباشرة ويتم وضعه بعيدًا عن مصادر الحرارة مثل المدافئ والمواقف، ولا يجب استخدام المنتج في أماكن غير مستوية.
٢. يجب عدم السماح للأطفال بلمس الدلاء الجليدية المجمدة لتجنب تجمد الأنسجة.
٣. يجب عدم لمس الدلاء الجليدي المجمد بأيدي فارغة أو مبللة، يجب استخدام القفازات أو القماش لمسسه وتجنب تجمد الأنسجة.
٤. إذا تسربت المبردات من الدلاء الجليدي، يجب عدم لمسها باليدين أو أجزاء أخرى من الجسم لتجنب تجمد الأنسجة.
٥. يمكن استخدام وحدة التحكم فقط مع ملحقات المنتج الموفرة، يجب عدم استخدام ملحقات غير رسمية أخرى لتجنب حدوث عطل.
٦. لا يجب إزالة الوحدة الرئيسية أثناء التشغيل، ويجب ألا يتعرض العصا المخلطة للتعرض.
٧. يجب عدم استخدام الجهاز بشكل مستمر لأكثر من ٢٠ دقيقة، وإذا تجاوزت فترة الاستخدام ٢٠ دقيقة، يجب التأكد من التوقف عن استخدامه لمدة لا تقل عن نصف ساعة قبل استخدامه مرة أخرى.
٨. يستخدم هذا المنتج بشكل رئيسي للاستخدام المنزلي، ولا يوصى باستخدامه للاستخدام التجاري. يرجى اتباع دليل الاستخدام لتجنب أي أضرار غير ضرورية.

كيفية استخدام الدلاء الجليدي:

١. عند تجميد الدلاء الجليدي، تأكد من إزالة العصا المخلطة وتجميد الدلاء الجليدي بشكل منفصل.
٢. عند تجميد الدلاء الجليدي، تأكد من الاحتفاظ بفتحات الدلاء الجليدي موجهة لأعلى وعموديًا في فريزر الثلاجة، ولا تميل الدلاء الجليدي أو تجمده بشكل مقلوب.
٣. عند تجميد الدلاء الجليدي، تأكد من مسح الماء بشكل جيد حتى لا تتحرك شفرة الخلاط بسبب الجليد.
٤. بعد الاستخدام في دلاء الثلج الخاص، تأكد من تسييل المبردات في الدلاء الجليدي تمامًا قبل وضعه في الفريزر لمنع توزيع غير متساوٍ للمبردات. (هز الدلاء الجليدي، إذا تدفقت السائل بسلاسة، فيمكن تجميده مرة أخرى)
٥. لا تكسر الدلاء الجليدي أو تسقطه لتجنب تسرب المبردات.
٦. استخدم ملعقة بلاستيكية أو خشبية لإزالة الأيس كريم المنتهي من الدلاء الجليدي، ولا تستخدم أدوات قطع حادة وملامع معدنية لتجنب إصابة سطح الدلاء الجليدي.
٧. لا تضع الدلاء الجليدي في أفران الميكروويف أو الأفران ومصادر الحرارة الأخرى.

	
<p>٥. بعد انتهاء عملية معالجة المكونات، انتظر حتى يتوقف الشفرة عن العمل، ثم قم بتدويرها عكس اتجاه عقارب الساعة لإزالة الجسم الرئيسي وبعدها يمكنك شرب المشروب.</p>	<p>مؤشر LED يكون مضاع دائماً أثناء التشغيل. عند توفر كمية كافية من الكهرباء، يظهر ضوء أبيض، وعندما يكون هناك نقص في الطاقة يظهر ضوء أحمر. يرجى شحنه في الوقت المناسب. عند عرقلة شفرة المنتج، يتوقف المنتج عن العمل. مضغوباً بصوت (صغير) ثلاثة مرات، قم بإزالة مكونات الشفرة واعد تشغيلها.</p>
	
<p>٧. عند الشحن، يضيء مؤشر LED باللون الأحمر المستمر. بعد الشحن الكامل، سيكون مؤشر LED باللون الأبيض (وفي هذا الوقت لا يمكن أن يعمل المنتج أثناء الشحن).</p>	

خطأ	مستخدم تحليل السبب	استكشاف الأخطاء وإصلاحها
<p>لا يمكن تشغيله أو إيقاف تشغيله أثناء الاستخدام، ويظهر إشارة حمراء وامضة.</p>	<p>لا يوجد كهرباء كافية</p>	<p>يرجى شحنها في الوقت المناسب</p>
<p>الخلاط لا يعمل.</p>	<p>ما إذا كان المزيف وشريط الخلاط في مكانهما سواء، ثم تجميد المواد الموجودة في دلو الثلج</p>	<p>أعد تركيب الوحدة الرئيسية وشريط الخلاط تحقق من المواد الموجودة في دلو الثلج</p>
<p>لم يتم إعداد الأيس كريم أو يعمل بشكل غير مرضٍ.</p>	<p>ما إذا كان دلو المجمد مجمداً أم لا ما إذا كانت المكونات موضوعة في الثلجة لتبرد</p>	<p>اضبط الثلجة على السرعة القصوى وضع دلو الثلج في الفريزر لأكثر من ٦ ساعة اترك المكونات في الثلجة لمدة ٢-٣ ساعة قبل التحضير</p>


المعايير التقنية:

طراز المنتج:	JI-01	جهد البطارية:	7.4V==	جهد الشحن:	5V == 1A
السرعة:	18000rpm	سعة البطارية:	2*1500mAh	القوة المصنفة:	55W
سعة الخلط:	340mL	الحجم:	86*86*249(mm)		
الوزن الصافي:	570g				

	
<p>١. ضع الغطاء الواقي على جانب التحريك البطيء.</p>	<p>٢. قم بتكريب الجسم واستدر الجسم في اتجاه عقارب الساعة وقم بربطه بإحكام على كوب العصير (سيتم سماع صوت إخبار).</p>
	
<p>٣. قم ببدء عملية صنع العصير، اضغط مرتين على زر العصارة لبدء التشغيل، ويتم ضبط وقت العمل على ٤٠ ثانية، قم بالانقر مرة أخرى على زر العصارة لإيقاف عمل المنتج.</p>	<p>٤. قم بقلب المنتج.</p>

٧. لا تضع الأجزاء الرئيسية للجهاز في غسالة الأطباق أو أدوات التنظيف، ولا تستخدم الصوف الصلب أو المنظفات الكاشطة أو السوائل القابلة للتآكل لتنظيف المنتج.
٨. هذا المنتج هو عصارة طازجة خاصة، ولا يُوصى باستخدامه لصنع اللحم أو المكسرات المطحونة أو منتجات الصويا.
٩. قم بفصل الخلاط بشكل دائم قبل التجميع أو التفكيك أو التنظيف.
١٠. قم بإيقاف مفتاح التشغيل وافصل مصدر الطاقة قبل استبدال أي أجزاء.

الرسم الهيكلي

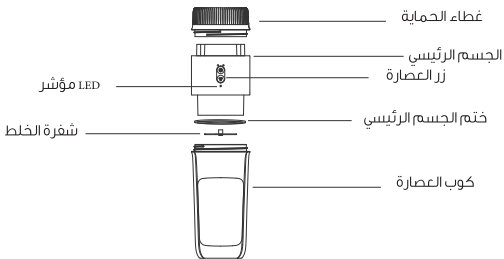

١. قم بإيقاف مفتاح التشغيل وفصل مصدر الطاقة قبل استبدال الملحقات أو لمس الأجزاء المتحركة.
٢. يحتوي المنتج على بطارية ليثيوم مدمجة ويجب مراعاة النقاط التالية:
 - أ. لا تستخدم هذا المنتج لفترة طويلة، يرجى شحنه كل ثلاثة أشهر لمنع تلف البطارية؛ ب. اشحنه عند انخفاض شحنة البطارية.
 - ٣. هذا المنتج مخصص للاستخدام المنزلي فقط. يرجى اتباع التعليمات الموجودة في الدليل لتجنب أي أضرار غير ضرورية.

اشحن المنتج بالكامل قبل استخدامه لأول مرة وقم بتنظيف الأجزاء التي تلامس الطعام بعناية، يتمتع هذا المنتج بتدابير أمان مزدوجة، حيث يكون جسم الكوب مدارًا ليتوافق مع وضعية محددة وهو في وضع الاستعداد (بعد التدوير في مكانه، يصدر المنتج صوت "بيب" ليشير إلى التركيب الصحيح في المكان).

تعليمات الاستخدام (عصارة)

١. أعد قراءة الملاحظات السابقة.
٢. اغسل الفواكه واقطعها إلى قطع صغيرة بحجم 1.5×1.5 سم (ملاحظة: في حالة وجود نواة في الفاكهة أو مواد صلبة أو قشور سميكة أو قشرة صلبة، قم بإزالتها أولاً).
٣. قم بملء الفاكهة في الكوب بنسبة ٦٠٪ من الحد الأقصى للمقياس، ثم أضف الماء أو الحليب أو أي سائل آخر إلى الحد الأقصى للمقياس في الكوب، ثم قم بتوصيل الجسم الرئيسي بالكوب، وسيصدر صوت "بيب" ليشير إلى أن الجسم الرئيسي تم تثبيته في المكان. ملاحظة: يجب ألا يتجاوز الفاكهة والماء داخل الكوب الحد الأقصى للمقياس لمنع تجاوز الماء أو العصير.
٤. انقر مرتين لتشغيل المنتج، سيعمل المنتج بالدوران العكسي (صورة ٤.٤)، وزم من العمل الافتراضي للمنتج هو ٤٠ ثانية، قم بتعريض المنتج بلطف أثناء العمل لتحسين الخلط.
٥. بعد الانتهاء من العصير، انتظر حتى يتوقف الشفرة عن العمل، ثم قم بتدوير الجسم الرئيسي عكس عقارب الساعة لإزالته، ويمكنك شرب العصير.
٦. قم بتوصيل كابل USB بمنفذ الشحن (متوافق مع مجموعة متنوعة من مصادر الطاقة بتيار ٥ فولت) عندما يتعد تشغيل الجهاز ويومض مؤشر الطاقة باللون الأحمر؛ يمكن توصيل هذا المنتج بمجموعة متنوعة من شواحن الهواتف الذكية باستخدام كابل الشحن الخاص بها، كما يمكن استخدام مصدر طاقة محمول لشحن المنتج، وبعد حوالي ٣ ساعات سيتم شحنه بالكامل، والشحن الكامل يمكن أن يحضر حوالي ١١ كوبًا من العصير.

يرجى قراءة دليل التعليمات بعناية واتباع التعليمات للتشغيل والاستخدام قبل استخدام هذا المنتج. يرجى الاحتفاظ بالدليل للرجوع إليه في المستقبل. هذا المنتج مخصص للاستخدام المنزلي والاستخدام المماثل فقط.

تحذيرات (عمارة)

١. هذا المنتج يعمل بواسطة بطاريات ليثيوم لتشغيل محرك التيار المستمر. يرجى استخدام محول طاقة بقدرة ١٨/٥٧ للشواحن. يرجى استخدام كابل الطاقة USB المرفق لشحن المنتج بالكامل قبل الاستخدام. يجب أن يكون وقت الشحن ٣ ساعات أو أكثر. كما يجب تنظيف جميع الأجزاء التي تلامس الطعام وتجفيفها قبل الاستخدام.

٢. قم بإزالة الجسم الرئيسي أو الكوب فقط بعد أن يتم إيقاف تشغيل المنتج وتوقف الشفرة عن العمل تمامًا.

٣. عند تنظيف المنتج، تأكد من أن الطاقة مفصولة وأن سدادة الشحن موصولة قبل تنظيف الجسم الرئيسي والأكواب. لا تغمر الجسم الرئيسي في الماء أو السوائل الأخرى، ولا تغسل الجسم الرئيسي تحت الماء أو السوائل الأخرى.

٤. لا تستخدم المنتج لصنع عصير أكثر من ٥ مرات متتالية في وقت واحد لتجنب حدوث ارتفاع في درجة الحرارة نتيجة لزيادة الحمل على المكونات الإلكترونية الثقيلة. يحتوي هذا المنتج على وظيفة حماية ضد الحمل الزائد، إذا كان حجم المكونات كبيرًا جدًا وعائقًا للشفرة، سيتوقف المنتج عن العمل ويصدر أصوات "بيب" لثلاث مرات، بعد إزالة المكونات الزائدة يمكن إعادة تشغيله مرة أخرى.

٦. لا يمكن تعقيم كل ملحقات هذا المنتج باستخدام الماء الساخن أو أفران الميكروويف التي تزيد عن ٦٠ درجة مئوية لحمايته من التشوه الحراري.

٧. لا تضع الأجزاء الرئيسية للجهاز في غسالة الأطباق أو معدات التنظيف، ولا تستخدم قطعة قماش من الصلب أو منظفات كاشطة أو سوائل تآكلية لتنظيف المنتج.

٨. هذا المنتج مخصص لصنع العصائر الطازجة فقط، ولا يوصى باستخدامه لطحن اللحوم أو المكسرات أو منتجات الصويا.

٩. قم بفصل الخلاط عن التيار الكهربائي بشكل دائم قبل التجميع والفك والتنظيف.

porodo
LIFESTYLE

دليل الاستخدام



صانعة الآيس كريم

Model: PD-BLICM-WH