

porodo | CHOOSE THE BEST

USER MANUAL

6+
AGES



KIDS TALK WALKIE TALKIE

Please read the instruction carefully before using the product

Model: PD-WKTKV2-WH

In the process of compiling this manual, we strive for the highest accuracy and completeness of the content, but our company will not assume any responsibility for possible errors and omissions.


Our company reserves the right to change product design and specifications. Due to the continuous development of technology, product design and specifications are subject to be changed without notice.



User safety information

please read the following safety information for your safe and efficient use:

1. Please turn off the walkie-talkie before entering the flammable and explosive environment.
2. Do not replace or charge the battery in a flammable and explosive environment.
3. Do not use the walkie-talkie with a damaged antenna. The damaged antenna may cause slight burns if it touches the skin.
4. The maintenance work of the walkie-talkie can only be carried out by professional and technical personnel, please do not disassemble or assemble it by yourself.
5. In order to avoid problems caused by electromagnetic interference or electromagnetic compatibility, please turn off the walkie-talkie in the place where the "Please turn off the walkie-talkie" sign is affixed.
6. This walkie-talkie does not have full waterproof performance, please keep it dry.
7. Do not expose the walkie-talkie to direct sunlight for a long time or put it near a heating device.
8. When the walkie-talkie is transmitting, keep the walkie-talkie in a vertical position and speak close to the microphone. If you wear the walkie-talkie on your body, please make sure that the antenna is at least about 5 cm away from your body when the walkie-talkie is transmitting.


FUNCTION DESCRIPTION

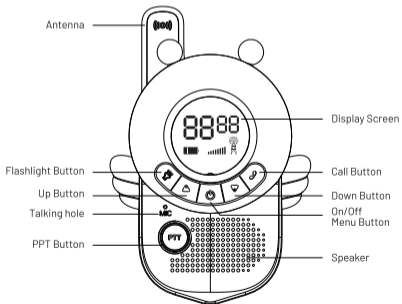

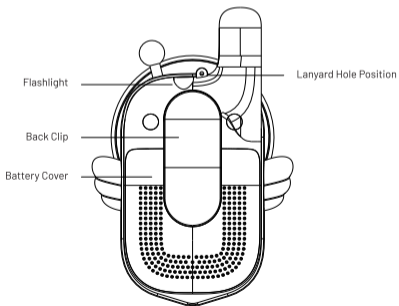


INTRODUCTORY GUIDE


1. Rotate the back clip to the upper right

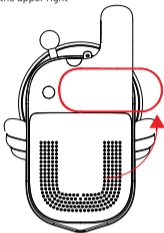


2. Push down the battery cover

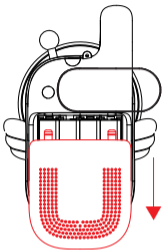

3. Insert 4 AAA batteries, close the battery cover and press down

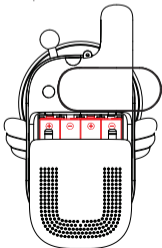

4. Rotate the back clip to the lower left

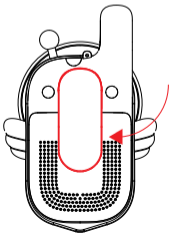

Turn on/off the walkie-talkie

Insert the battery, press the turn on button for 4-3 second, the walkie talkie will beep once and the display is on, indicating normal boot. Press the turn off button for 4-3 seconds, the walkie-talkie will beep once and turn off the screen display, indicating that it has been shut down normally.

Power display

The battery icon on the screen displays the battery level, from full to empty. A periodic "beep" sound or the entire screen display has dimmed, indicating that the battery is low and the battery needs to be replaced or recharged.

Set volume

In the power-on state, short press the ▲ button to increase the volume, and short press the ▼ button to decrease the volume. The volume is divided into 8-1 levels, which are marked by a vertical line icon on the display.

Set up channel

Turn on the walkie-talkie, short press the menu button once to enter the channel setting, the channel number on the screen starts to flash; use the A/V button to select the channel; after setting, press the PTT button to save the setting.

Set group code/CTCSS

Turn on walkie-talkie, short press the menu button twice to enter the group code setting, the channel numbers on the screen start to flash; use the ▼/▲ button to select the group code; after setting, press the PTT button to save the setting

Turn on/off flashlight

In the power-on state, short press the flashlight button to turn on the flashlight, and short press the flashlight button again to turn off the flashlight.

Set call tone

Send ringtone function, send different ringtones to other walkie-talkies, short press the Call tone button to send ringtones; there are 10-1 call tones to choose from. Turn on the walkie-talkie, short press the menu key three times to enter the Call tone mode setting; use the A/V buttons to select; after setting, press the PTT button to save the setting.

Voice signal transmission/reception

Before communication, set the channel and group code of the multiple walkie-talkies to be communicated to be consistent. Long press the PTT button, speak and send a voice signal; Release the PTT button to receive the voice signal.

Product Parameter

Frequency: 409.7500409.9875 MHz

RF output power: -0.5W

Working voltage: 4.3V-6V

Communication distance: 3-1 kilometers

(depending on geographical location and ring mirror)

Encryption: CTCSS \DCS

Number of channels (simplex): 20

Frequency stability: ± 5 ppm

Precautions :

1. Regularly check whether the casing and other parts are damaged, and if any damage is found, stop using it until the repair is complete;
2. If there are any obvious damaged parts, please stop using it and keep it away from children. Do not let children play with disintegrated, damaged or deformed toys, so as to avoid accidental swallowing, suffocation and other dangers.
3. Do not store in a place near fire, high temperature and humidity;
4. When the machine is not used for a long time, please remove the battery and place it properly.

Battery use and safety precautions :

1. The walkie-talkie does not have the charging function, and the battery cannot be charged directly into the walkie-talkie;
2. It can only be charged by rechargeable batteries in a dedicated battery charger;
3. Pay attention to the positive and negative positions when installing the battery.

Maintenance :

Do not immerse in water or place in a humid environment; Pay attention to cleaning and dustproof, and wipe the surface stains with a dry cloth.

porodo | CHOOSE THE BEST

دليل الاستخدام

6+
AGES



محادثة الأطفال جهاز المشي والحديث

يرجى قراءة التعليمات بعناية قبل استخدام المنتج

Model: PD-WKTKV2-WH


في عملية تجميع هذا الدليل، نسعى إلى الدقة واكتمال المحتوى، ولكن شركتنا لن تتحمل أي مسؤولية عن الأخطاء والإغفال المحتملة. تحتفظ شركتنا بحق تغيير تصميم المنتج والمواصفات. نظراً للتطور المستمر في التكنولوجيا، فإن تصميم المنتج والمواصفات قابلة للتغيير دون إشعار مسبق.



معلومات أمان المستخدم

يرجى قراءة المعلومات الأمان التالية لاستخدامك الآمن والفعال:

1. يرجى إيقاف تشغيل الراديو اللاسلكي قبل دخولك إلى بيئة قابلة للاشتعال والانفجار.
2. لا تقم بتغيير البطارية أو شحنها في بيئة قابلة للاشتعال والانفجار.
3. لا تستخدم الراديو اللاسلكي بوجود هوائي متضرر. قد يتسبب الهوائي المتضرر في حروق طفيفة إذا تلامس البشرة.
4. يمكن إجراء أعمال صيانة الراديو اللاسلكي فقط من قبل الأفراد المحترفين والفنيين، يرجى عدم فكه أو تجميعه بنفسك.
5. من أجل تجنب المشاكل الناجمة عن التداخل الكهرومغناطيسي أو التوافق الكهرومغناطيسي، يرجى إيقاف تشغيل الراديو اللاسلكي في المكان حيث تكون موجودة لافتة "يرجى إيقاف تشغيل الراديو اللاسلكي".
6. هذا الراديو اللاسلكي لا يتمتع بأداء مقاوم للماء بالكامل، يرجى الحفاظ على جفافه.
7. لا تعرض الراديو اللاسلكي لأشعة الشمس المباشرة لفترة طويلة أو وضعه بالقرب من جهاز تسخين.
8. عندما يكون الراديو اللاسلكي في وضع الإرسال، يرجى الاحتفاظ به في وضع عمودي والتحدث قرب الميكروفون. إذا كنت تضع الراديو اللاسلكي على جسمك، يرجى التأكد من أن الهوائي على الأقل على بُعد حوالي 5 سم عن جسمك عندما يكون الراديو اللاسلكي في وضع الإرسال.


وصف الوظيفة

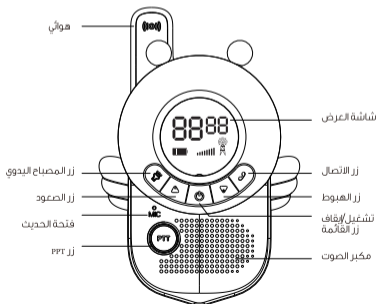

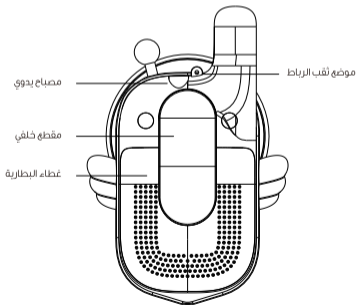


دليل مقدمة


١. قم بتدوير مشبك الظهر إلى الأعلى اليمين.

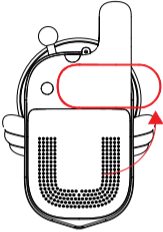


٢. اضغط باتجاه أسفل على غطاء البطارية.

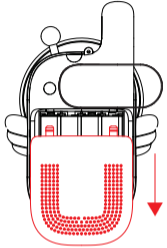

٣. قم بإدخال ٤ بطاريات AAA، ثم أغلق غطاء البطارية واضغط باتجاه أسفل.

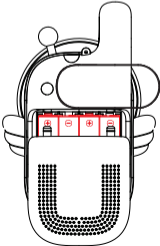

٤. قم بتدوير مشبك الظهر إلى الأسفل الأيسر.

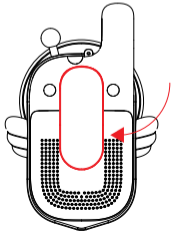

قم بتشغيل/إيقاف الراديو اللاسلكي.

قم بإدخال البطارية، ثم اضغط على زر التشغيل لمدة 3-4 ثوان، ستصدر إشارة صوتية مرة واحدة من الراديو اللاسلكي ويتم تشغيل الشاشة، مما يشير إلى بدء التشغيل العادي. قم بالضغط على زر الإيقاف لمدة 3-4 ثوان، سيصدر الراديو اللاسلكي إشارة صوتية مرة واحدة وسيتم إيقاف عرض الشاشة، مما يشير إلى إغلاقه بشكل طبيعي.

عرض الطاقة

يعرض رمز البطارية على الشاشة مستوى البطارية، من ممتلئة إلى فارغة. إذا سمعت صوت "صغير" دوري أو إذا ضعف عرض الشاشة بالكامل، فهذا يشير إلى انخفاض مستوى البطارية وضرورة استبدالها أو إعادة شحنها.

ضبط مستوى الصوت

في حالة التشغيل، اضغط بشكل مؤقت على زر "+" لزيادة مستوى الصوت، واضغط بشكل مؤقت على زر "-" لخفض مستوى الصوت. يتم تقسيم مستوى الصوت إلى 8-1 مستويات، وتتميز برمز خط عمودي على الشاشة.

قم بإعداد القناة

قم بتشغيل الراديو اللاسلكي، ثم اضغط مؤقتًا على زر القائمة مرة واحدة للدخول إلى إعدادات القناة، ستبدأ رقم القناة على الشاشة في الوميض؛ استخدم زر \sqrt{v} لتحديد القناة؛ بعد الإعداد، اضغط على زر PTT لحفظ الإعداد.

قم بضبط رمز المجموعة / CTCSS

قم بتشغيل الراديو اللاسلكي، ثم اضغط مؤقتًا على زر القائمة مرتين للدخول إلى إعداد رمز المجموعة، ستبدأ أرقام القنوات على الشاشة في الوميض؛ استخدم الزر لتحديد رمز المجموعة؛ بعد الإعداد، اضغط على زر PTT لحفظ الإعداد.

تشغيل/إيقاف المصباح اليدوي.

في حالة التشغيل، اضغط مؤقتًا على زر المصباح اليدوي لتشغيل المصباح، و اضغط مؤقتًا مرة أخرى على زر المصباح اليدوي لإيقاف تشغيل المصباح.

قم بضبط نغمة الاتصال.

قم بإرسال وظيفة نغمة الرنين، و قم بإرسال نغمات رنين مختلفة إلى راديو اللاسلكي الآخر، اضغط مؤقتًا على زر نغمة الاتصال لإرسال نغمات الرنين؛ هناك 1-10 نغمات اتصال للاختيار من بينها. قم بتشغيل راديو اللاسلكي، ثم اضغط مؤقتًا على مفتاح القائمة ثلاث مرات لدخول وضع إعداد نغمة الاتصال؛ استخدم أزرار \sqrt{v} للتحديد؛ بعد الإعداد، اضغط على زر PTT لحفظ الإعداد.

نقل/استقبال إشارة الصوت

قبل التواصل، قم بضبط القناة ورمز المجموعة لراديو اللاسلكي المتعدد الذي سيتم التواصل معه بشكل متنسق. قم بالضغط المطول على زر PTT، وتحدث وأرسل إشارة صوتية؛ قم بتحرير زر PTT لاستقبال إشارة الصوت.

معلومات المنتج

لتردد: ٤٠٩.٧٥٠، ٤٠٩.٩٨٧ هـ
قوة الإخراج اللاسلكية: -٥.٥ واط
الجهود التشغيلية: ٤.٣ فولت - ٦ فولت
مسافة الاتصال: ٣-١ كيلومترات (تعتمد على الموقع الجغرافي والعوامل المحيطة)

التشفير: CTCSS \ DCS

عدد القنوات (بدون تداخل): ٢٠
ثبات التردد: ± 0.5 جزء في المليون

تحذيرات واحتياطات:

١. تحقق بانتظام مما إذا كانت الغلاف والأجزاء الأخرى تالفة، وإذا تم اكتشاف أي تلف، يرجى التوقف عن استخدامه حتى يتم إجراء الإصلاح.
٢. إذا كانت هناك أجزاء متضررة واضحة، يرجى التوقف عن استخدامه وابعاده عن الأطفال. لا تسمح للأطفال باللعب بألعاب تكون تالفة أو متفككة أو مشوهة، لتجنب الابتلاع العرضي والاختناق والمخاطر الأخرى.
٣. لا تخزنه في مكان قرب النار أو درجة حرارة عالية أو رطوبة.
٤. عندما لا يتم استخدام الجهاز لفترة طويلة، يرجى إزالة البطارية وتخزينها بشكل صحيح.

استخدام البطارية واحتياطات السلامة:

١. راديو اللاسلكي لا يحتوي على وظيفة الشحن، ولا يمكن شحن البطارية مباشرة في راديو اللاسلكي.
٢. يمكن شحنها فقط باستخدام بطاريات قابلة للشحن في شاحن البطارية المخصص.
٣. يجب الانتباه إلى وضع الأقطاب الإيجابية والسلبية عند تركيب البطارية.

صيانة:

- لا تغمر الجهاز في الماء أو وضعه في بيئة رطبة. اهتم بالتنظيف والوقاية من الغبار، وامسح البقع السطحية بقطعة قماش جافة.