




PREDATOR PRO

GAMING SEAT

Model: PDX531



Backrest adjustment

1. First, completely fold the backrest, and then open it to the maximum angle.

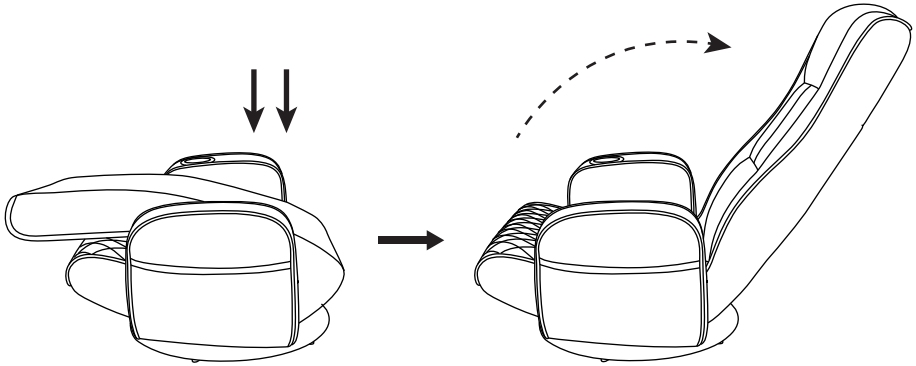


2. The backrest can be adjusted to five different angles.

3. If you want the original angle, you need to fold the backrest again and then adjust it to the desired angle.

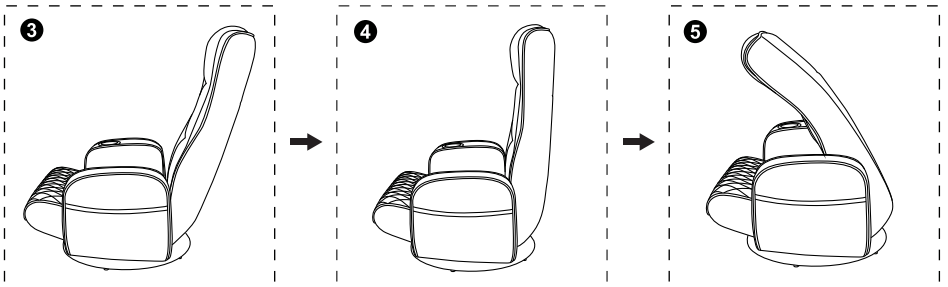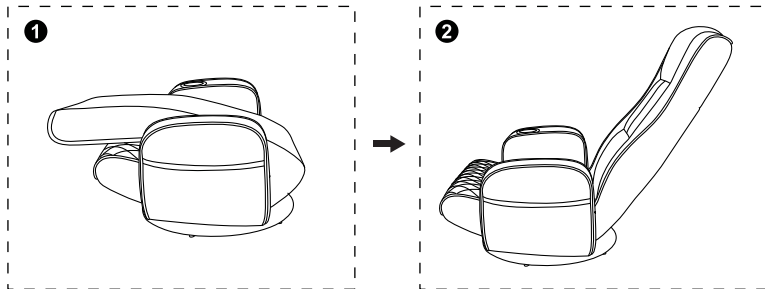


Headrest adjustment

1. The headrest can be adjusted to four different angles.

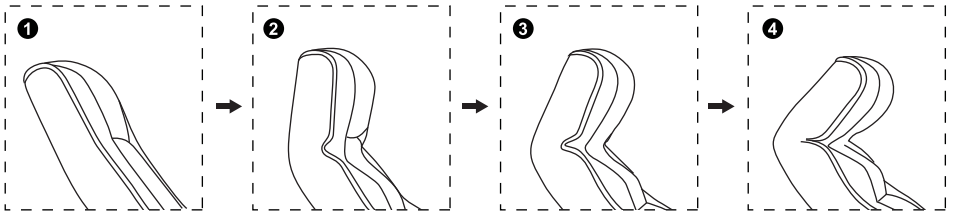

2. After fully folding the headrest, you can open it again to the maximum angle.

3. If you want the original angle, you need to fold the backrest again and then adjust it to the desired angle.

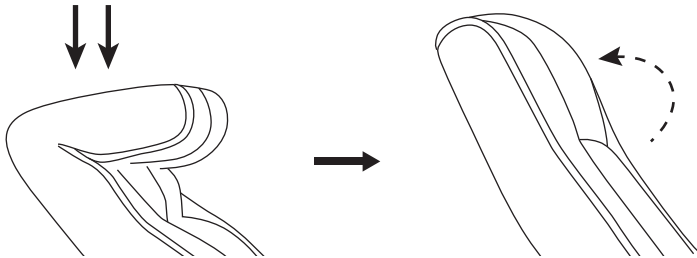




Model: PDX531



كرسي الألعاب
بريداتور برو

ضبط ميل الظهر

أولاً، قم بطي الظهر بشكل كامل، ثم قم بفتحه إلى أقصى زاوية

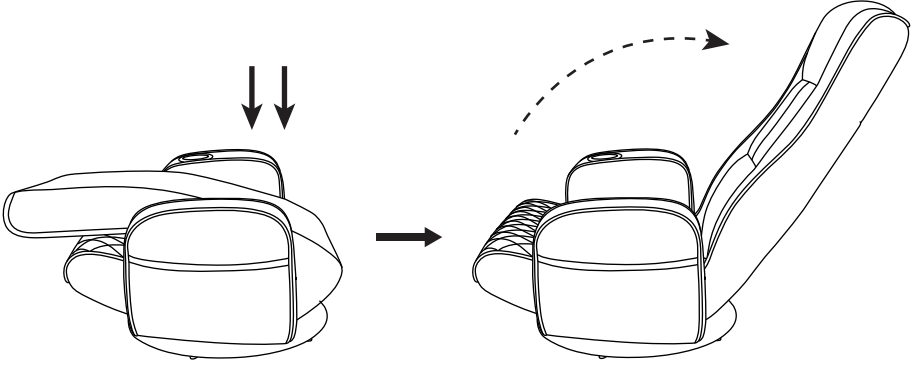


١. يمكن ضبط ميل الظهر على خمسة زوايا مختلفة.
٢. إذا كنت ترغب في العودة إلى الزاوية الأصلية، يجب طي الظهر مرة أخرى ثم ضبطه على الزاوية المطلوبة.

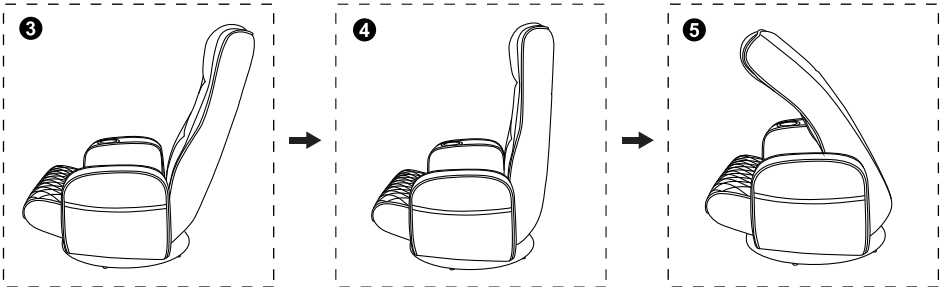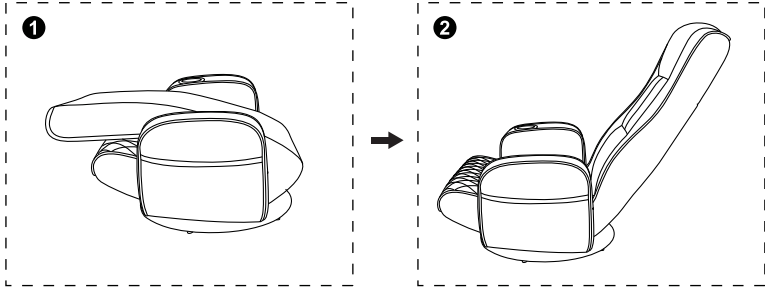

ضبط مسند الرأس

يمكن ضبط مسند الرأس على أربعة زوايا مختلفة.

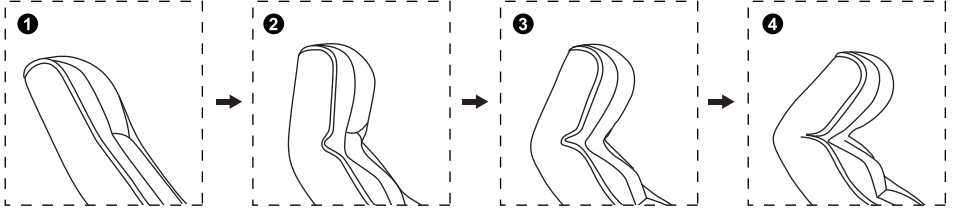

٢. بعد طي مسند الرأس بالكامل، يمكنك فتحه مرة أخرى إلى أقصى زاوية.
٣. إذا كنت ترغب في العودة إلى الزاوية الأصلية، يجب طي الظهر مرة أخرى ثم ضبطه على الزاوية المطلوبة.

