


porodo
LIFESTYLE



Portable Mini
Washing Machine

Model : PD-MWSHM-WH

Operation

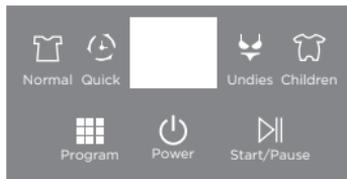

Control Panel

1. Power Gently press the power button for 2 seconds and the buzzer will sound to start the machine. The power indicator will light up at the same time, and the Nixie tube will display the washing time. There is no operation within 10 minutes of startup, and the power automatically turns off. Start/Pause
 2. Start the washing program. If the washing machine is running, pressing this button will pause operation.
 - a. When paused, all indicator lights light up and the selected ones flash.
 - b. After startup, when the program runs, the corresponding running program indicator light flashes.
 - c. Restart after pausing, and the program continues to run at the pause point.
 3. Program
Used to select the washing program. Turning the program knob causes the program to cycle as follows: Normal—Quick—Undies—Children—Normal
Automatically enter standby mode until the setting program is completed.
 4. Power Off: In the washing state, press Power, the indicator light goes out, and the entire machine stops working.
- II. Work Time
1. Normal: 10 mins
 2. Quick: 5 mins
 3. Undies: 15 mins
 4. Children: 20 mins
- III. Drain
- Drainage method: Ensure that the water outlet is placed in the sink and then forcefully lower the drainage pipe behind the machine. The washing machine starts to drain, and after the water is fully drained, hang the drainage pipe.

Troubleshooting

Fault phenomenon: During the washing process, water overflowed from the edges of the upper part of the entire machine

Reason analysis: The water level is too high or the proportion of clothing is too low Method: Use a container to scoop out excess water from the bucket

Fault phenomenon: The wave wheel stops rotating Reason analysis: clothes are too heavy and the voltage is too low Method: Reduce the amount of laundry or wait for the voltage to be normal before use


Fault symptom: The washing program stops running Cause analysis: Poor contact of the power cord Method: Check the power cord

Fault phenomenon: residual water after positive water supply and drainage Cause analysis: The drainage is not completely discharged Method: Wipe dry with a dry cloth.

Notice

1. Prevent children from touching.
2. After using the washing machine, clean it in a timely manner.
3. When not using the machine, place it in a well ventilated and dry place to avoid direct sunlight and contact with children.
4. The power cord is damaged, please replace it in a timely manner.
5. Please do not touch the carpet at the bottom of the product to avoid blocking the bottom vent.

Parts Name

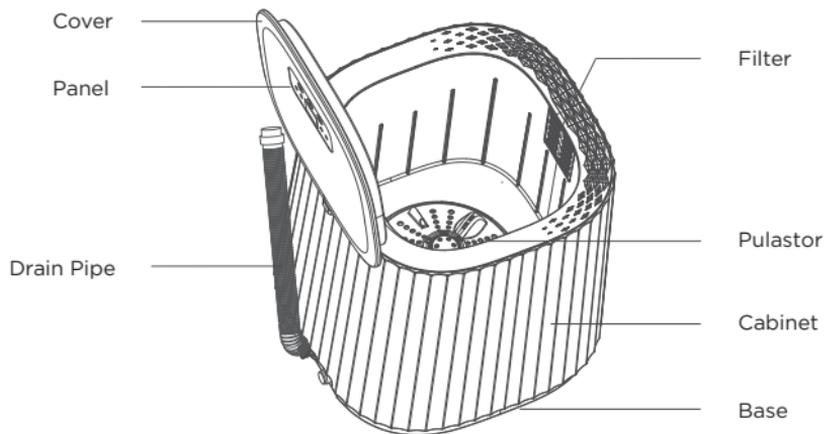

Model	Rated Power	Input Power	Capacity	Input Power	Size
MP 15-16	12V	12V	1.5kg	18W	300x10x320mm

Setting Position

1. Install away from heat sources and avoid light exposure
2. Place the washing machine on a stable level surface

Cloth Prepare

Peel off obvious soil and fibers on laundry in advance

Cloth Position

Please place the clothes flat in the washing machine

Note

After use, please clean the filter screen and internal dirt in a timely manner to avoid secondary washing pollution

www.porodo.net



porodo
LIFESTYLE



**غسالة محمولة
صغيرة**

Model : PD-MWSHM-WH



Control Panel

١. الطاقة: اضغط برفق على زر الطاقة لمدة ٢ ثانية وسيتم إصدار صوت التنبيه لتشغيل الجهاز. سيتم إضاءة مؤشر الطاقة في نفس الوقت، وسيعرض أنبوب نيكسي وقت الغسيل. إذا لم يتم أي عملية خلال ١٠ دقائق من التشغيل، سيتم إيقاف التشغيل تلقائياً.

٢. بدء/إيقاف مؤقت: يبدأ برنامج الغسيل. إذا كانت الغسالة تعمل، فإن الضغط على هذا الزر سيوقف التشغيل مؤقتاً.
a. عند الإيقاف المؤقت، يتم إضاءة جميع مؤشرات الإضاءة ويومض تلك التي تم تحديدها.
b. بعد التشغيل، عند تشغيل البرنامج، ستومض مؤشرات البرامج التشغيل الخاصة بها.
c. إعادة التشغيل بعد الإيقاف المؤقت، ويستمر البرنامج في العمل من نقطة الإيقاف المؤقت.
٤. البرنامج: يستخدم لتحديد برنامج الغسيل. يتسبب تدوير مقبض البرنامج في تناوب البرامج على النحو التالي: عادي - سريع - ملابس داخلية - أطفال - عادي. يدخل الجهاز تلقائياً في وضع الاستعداد حتى يتم إكمال إعداد البرنامج.
إيقاف التشغيل: في حالة الغسيل، اضغط على زر الطاقة. ينطفئ مؤشر الطاقة ويتوقف الجهاز عن العمل بالكامل.

١١. وقت العمل

١. عادي: ١٠ دقائق

٢. سريع: ٥ دقائق

٣. ملابس داخلية: ١٥ دقيقة

٤. أطفال: ٢٠ دقيقة

١١١. التصريف

طريقة التصريف: تأكد من وضع مخرج الماء في الحوض ثم أدر أنبوب التصريف وراء الجهاز بقوة. تبدأ الغسالة في التصريف، وبعد تصريف الماء بالكامل، قم بتعليق أنبوب التصريف.

استكشاف الأخطاء وإصلاحها

ظاهرة العطل: أثناء عملية الغسيل، تسربت المياه من حواف الجزء العلوي للجهاز بأكمله.
تحليل السبب: مستوى الماء مرتفع جدًا أو نسبة الملابس قليلة جدًا.
الطريقة: استخدم وعاءًا لتجميع الماء الزائد من الجرة.

ظاهرة العطل: توقف عجلة الموجهة عن الدوران.
تحليل السبب: الثياب ثقيلة جدًا والجهد منخفض.
الطريقة: قلل كمية الغسيل أو انتظر حتى يتم استقرار الجهد قبل الاستخدام.


ظاهرة العطل: توقف برنامج الغسيل عن العمل.
تحليل السبب: سوء اتصال سلك الطاقة.
الطريقة: قم بفحص سلك الطاقة.

ظاهرة العطل: تبقى مياه بعد توصيل المياه الإيجابية والتصريف.
تحليل السبب: عدم تصريف المياه بشكل كامل.
الطريقة: جفها بقطعة قماش جافة.

تنبيهات:

تجنب لمس الأطفال.
بعد استخدام الغسالة، قم بتنظيفها في الوقت المناسب.
عند عدم استخدام الجهاز، قم بوضعه في مكان جيد التهوية وجاف، وتجنب تعرضه لأشعة الشمس المباشرة وتجنب ملامسة الأطفال.
في حالة تلف سلك الطاقة، يرجى استبداله في الوقت المناسب.
يرجى عدم لمس السجادة الواقية بالأسفل من المنتج لتجنب إعاقة فتحة التهوية السفلية.

اسم الأجزاء

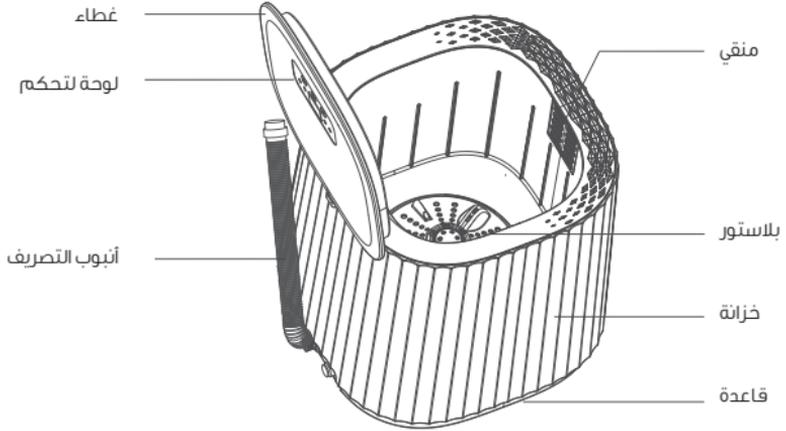

المعلومات

تصنيف	النموذج	مدخلات الطاقة	قدرة الطاقة	مدخل الطاقة	مقاس
MP 16-16	1.5 كجم	12 فولت -	18 واط	12 فولت -	32. x 1. x 3.. ملم

ضع الجهاز في الموضع المناسب:

١. قم بتركيبه بعيداً عن مصادر الحرارة وتجنب تعرضه للضوء المباشر.
٢. ضع الغسالة على سطح مستو ومستقر.

إعداد الملابس:

قم بإزالة الأوساخ والألياف الواضحة من الملابس مسبقاً.

موضع الملابس:

يرجى وضع الملابس بشكل مسطح في الغسالة.

ملاحظة:

بعد الاستخدام، يرجى تنظيف شاشة الفلتر والأوساخ الداخلية بشكل متكرر لتجنب تلوث الغسيل الثانوي.