



ANDROID TV & GAME STICK

10000+ BUILT-IN GAMES

PDX525

1. Getting Started

1.1 Basic Operations

1.1.1 Power On/ Off and Sleep

1. Connect the box to the TV with HDMI cable, connect box to the power adaptor, Connect mouse, air mouse or other input devices with USB port

2. After the device and cable connected ,power led turn to blue .

3. After the device and cable disconnected, Power LED turns off

4. Under power on mode, press remote control's power button, device is entering into sleep mode.

5. Under sleep mode, device will be wake when you press remote control's power button,


1.1.2 Open applications

Use remote control's arrow keys to choose the wanted program, click OK button to open the selected program

1.1.3 Switch in the applications

Click "My Apps" to view recently used programs, click program icon to switch application arbitrarily

1.1.4 Close Applications

Click icon  * to view recently used programs, choose one of them by click and hold, drag it to blank area to close the application

* This function only operated in the condition of Mouse mode


1.1.5 Back To Home Screen


Click icon  to return to home screen

Click icon  on remote control to return to home screen


1.1.6 Read External Storage Data


Read U Disk

Insert U flash disk or removable hard disk into USB port in the status of power on, icon  appears in top left corner of the desktop, open “FileBrowser”, the identified USB(A:) will appear under “Local Disk”, U disk’s operation is available now

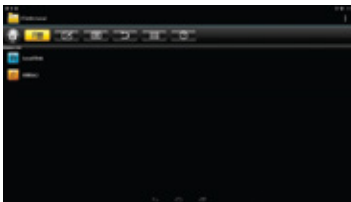

Read TF card

Insert TF card into the device in the status of power on, when icon  appears in top left corner of the desktop, open “FileBrowser”, the identified External Storage Card will appear under “Local Disk”, TF card’s operation is available now

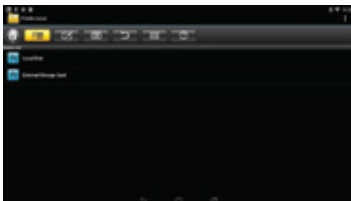

1.1.7 WIFI Function

Home Screen → SETTINGS → Network → Select “Wi-Fi” to open WIFI function

Choose hotspot → Input Password → Connect to the network



1.1.8 Ethernet Function

Home Screen → SETTINGS → Network → Select “Ethernet” to open Ethernet function


Insert network cable, network will be connected automatically



1.1.9 WLAN Hotspot

Operations on the box :

Home Screen → SETTINGS → Other → More Setting → More... → Portable hotspot → Select “Portable Wi-Fi hotspot”

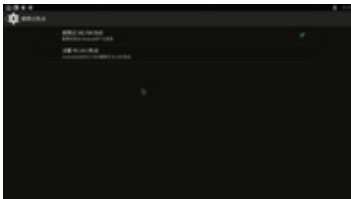

Select “Set up Wi-Fi hotspot” to set up “Network SSID”、
“Security”、 “Password” parameters



- * Ensure connected to the wired network, the box can be used as wireless AP to support more wireless devices access in the family

2.1.0 The Step that how to reflash the box

- 1) Uncompress the downloaded firmware (ROM) to the root of and SD card(format your SD card first).
- 2) Insert the SD Card into powered-off Box (power cable not plugged in) with no external USB storage attached.
- 3) Using a toothpick, insert into the AV port of Box, press and hold the hidden button while plugging power in.Do not release until you see the screen of Robert Logo.
- 4) Update will run automatically. When it is done then choose "Reboot". You can disregard any errors that display after the update, they are not relevant to your device.
- 5) When system has rebooted then you should first check to ensure wifi is working by going to Settings->Wi-Fi. Turn on the wifi if it's off and you should be able to connect.

For more information,
please contact our support team:

support@porodo.net



أندرويد تي في وجهاز الألعاب

أكثر من 1000 لعبة مدمجة

PDX525

١. البدء

١.١ العمليات الأساسية

١.١.١ تشغيل / إيقاف التشغيل ووضع السكون

١. قم بتوصيل الصندوق بالتلفزيون باستخدام كابل HDMI، وقم بتوصيل الصندوق بمحول الطاقة، وقم بتوصيل الماوس أو الماوس الجوي أو أي أجهزة إدخال أخرى بمنفذ USB.

٢. بعد توصيل الجهاز والكابل، يتحول مؤشر الطاقة إلى اللون الأزرق.

٣. بعد فصل الجهاز والكابل، يتوقف مؤشر الطاقة عن العمل.

٤. في وضع التشغيل، اضغط على زر الطاقة على جهاز التحكم عن بُعد، وسيدخل الجهاز في وضع السكون.

٥. في وضع السكون، سيتم استيقاظ الجهاز عند الضغط على زر الطاقة على جهاز التحكم عن بُعد.

١.٢ فتح التطبيقات

استخدم مفاتيح التوجيه على جهاز التحكم عن بُعد لاختيار البرنامج المرغوب، انقر على زر "موافق" لفتح البرنامج المحدد.

١.١.٣ التبديل بين التطبيقات

انقر على "تطبيقاتي" لعرض البرامج المستخدمة مؤخرًا، انقر على أيقونة البرنامج للتبديل بين التطبيقات بشكل عشوائي.

١.١.٤ إغلاق التطبيقات

انقر على أيقونة "☰" لعرض البرامج المستخدمة مؤخرًا، اختر واحدة منها عن طريق النقر والاستمرار في النقر، ثم اسحبها إلى منطقة فارغة لإغلاق التطبيق. يعمل هذا الوظيفة فقط في وضع التحكم بالماوس.


١.١.٥ العودة إلى شاشة الصفحة الرئيسية

انقر على الأيقونة "🏠" الصفحة الرئيسية " للعودة إلى شاشة الصفحة الرئيسية. اضغط على أيقونة "🏠" العودة " على جهاز التحكم عن بُعد للعودة إلى شاشة الصفحة الرئيسية.

١.١.٦ قراءة بيانات التخزين الخارجي


قراءة وحدة التخزين المحمولة (U Disk)

أدخل وحدة فلاش USB أو قرص صلب قابل للإزالة في منفذ USB في حالة التشغيل، ستظهر أيقونة - في الزاوية اليسرى → العلوية من سطح المكتب، افتح مستعرض الملفات، وستظهر وحدة USB المُعرفة (A:) تحت "قرص محلي"، وبذلك يصبح بإمكانك استخدام وحدة التخزين المحمولة الآن.

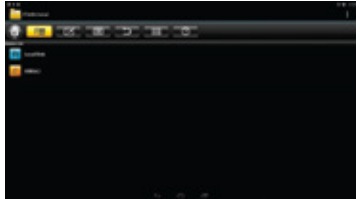


قراءة بطاقة TF

أدخل بطاقة TF في الجهاز في حالة التشغيل، عندما تظهر الأيقونة في الزاوية اليسرى ■ العلوية من سطح المكتب، قم بفتح "مستعرض الملفات"، ستظهر بطاقة التخزين الخارجية المُعرفة تحت "قرص محلي"، وبذلك يصبح بإمكانك استخدام بطاقة TF الآن.

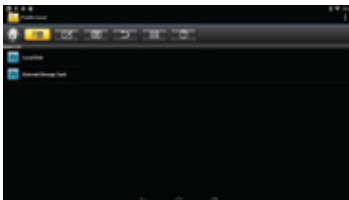

١.١.٧ وظيفة الواي فاي (FI)

الشاشة الرئيسية « الإعدادات » الشبكة « حدد الشبكة اللاسلكية لفتح وظيفة الواي فاي.
اختر نقطة اتصال وأدخل كلمة المرور - قم بالاتصال بالشبكة.

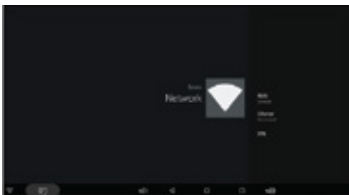


1.1.8 وظيفة Ethernet (الشبكة السلكية)

الشاشة الرئيسية « الإعدادات » الشبكة « حدد Ethernet » لفتح وظيفة الشبكة السلكية.
أدخل كابل الشبكة، وسيتم توصيل الشبكة تلقائيًا.



1.1.9 نقطة اتصال WLAN الساخنة

العمليات على الصندوق
الشاشة الرئيسية
الإعدادات
أخرى « المزيد
ضبط المزيد، نقطة اتصال ساخنة محمولة » حدد "نقطة اتصال ساخنة Wi-Fi
المحمولة"

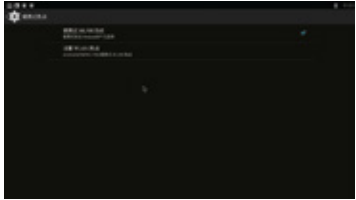

حدد "إعدادات نقطة اتصال ساخنة واي فاي" لإعداد "شبكة النقل الآمنة" وتعيين معلمات كلمة مرور الأمان.



تأكد من الاتصال بالشبكة السلكية، يمكن استخدام الصندوق بشكل لاسلكي لدعم المزيد من الأجهزة اللاسلكية في الأسرة.

٢.١.٠ خطوات إعادة تفليش الصندوق

١. قم بفك ضغط البرامج/التحديثات التي تم تنزيلها (ROM) إلى جذر بطاقة SD (قم بتهيئة بطاقة SD أولاً).
٢. أدخل بطاقة SD في الصندوق (الصندوق مغطى ولا يوجد أي تخزين USB خارجي متصل).
٣. باستخدام عود الأسنان، أدخله في منفذ AV للصندوق، ثم اضغط واحتفظ بالزر الخفي أثناء توصيل الطاقة. لا تفك الضغط عنه حتى ترى شاشة شعار Robert.
٤. ستقوم عملية التحديث تلقائياً. عند الانتهاء، اختر "إعادة التشغيل". يمكنك تجاهل أي أخطاء تظهر بعد التحديث، حيث لا تتعلق بجهازك.
٥. بعد إعادة تشغيل النظام، تحقق أولاً من تشغيل واي فاي من خلال الانتقال إلى الإعدادات -> الواي فاي. قم بتشغيل الواي فاي إذا كان مغلقاً ويجب أن تتمكن من الاتصال.

For more information,
please contact our support team:
support@porodo.net